




INSTALLATION INSTRUCTIONS

AUTOMATIC GREASE INTERCEPTOR

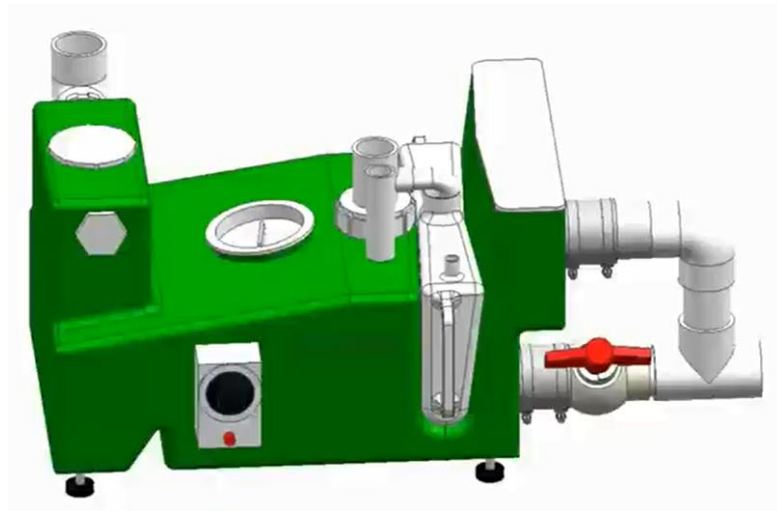

OPEN THE PACKAGE


► Check all the parts

1. 4 x Adjustable Legs
2. Cleaning brushes
3. Oil extraction assembly
4. Heater
5. Sink waste trap
6. Outlet Assembly
7. 50mm Male Adaptor
8. Tank water level
9. Lid assembly



Step 1

- ▶ Pick out No.7 (50mm male adaptor) and (water level tank) No.8
- ▶ Install the male adaptor and tank as show in the diagram. Fig 1.

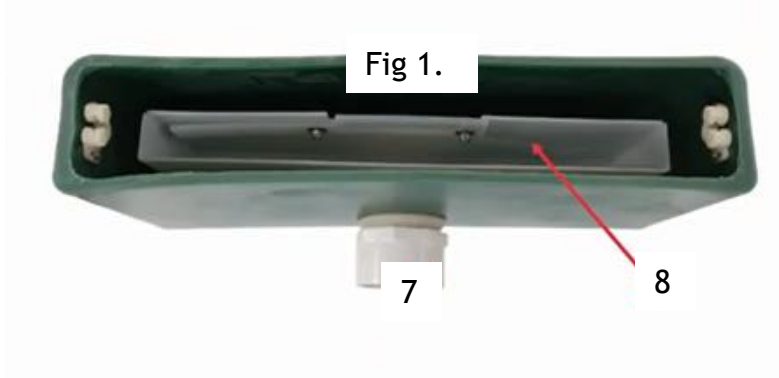


Step 2

- ▶ Pick out the 4 adjustable legs. No.1
- ▶ Screw into the base of the AGI and level accordingly. Fig 2.



Step 3

- ▶ Pick out the outlet assembly. No.6
- ▶ Install the outlet assembly to the AGI as shown in Fig 3.

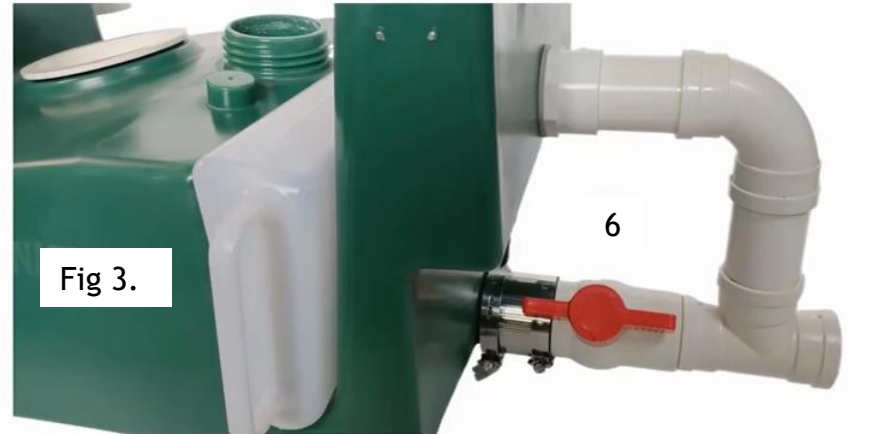


Step 4

- ▶ Pick out the oil extraction assembly No.3
- ▶ Install it onto the AGI as shown in Fig 4.




Step 5

- ▶ Pick out the heater assembly. No.4
- ▶ There are threaded holes on both sides for ease of install.
- ▶ Select one and install the heater.
Fig.5

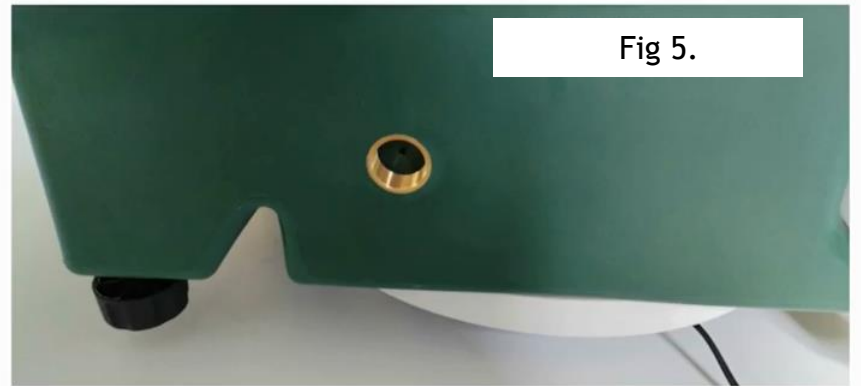

Step 6

- ▶ Close the lid No.9 and as shown in Fig.6

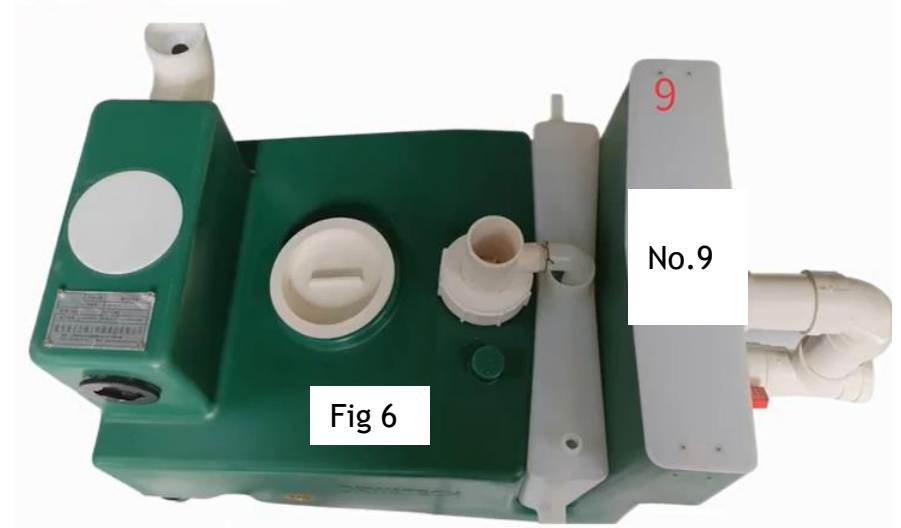

Step 7 (If using a Drain-Tech filter)


- ▶ Pick out the waste trap No.5 and attach to the sink as shown in Fig.7



Step 8

- ▶ Now connect the waste trap No.5 to the AGI with the relevant waste fittings and as shown in Fig.9
- ▶ There are 2 holes for the grease trap choose the one that works for the installation environment.

YOUR AGI UNIT IS NOW READY FOR USE

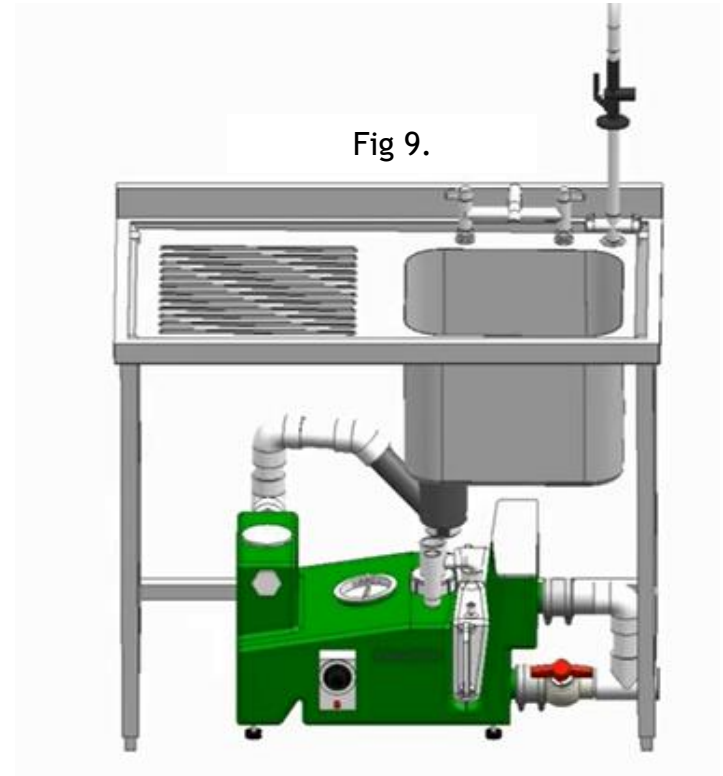



For more information please contact:

Sales@biodoseltd.com

Tel: 0845 163 0221